

0, Buy a "Magic" All-in one remote control £7.00 to £10.00

To communicate with the LG 32ld420 set the all in one to 11840 check that communication is OK then follow the following procedure.

1, press the device key

2, press and hold the Magic key until the device blinks twice (the device key will blink) once then twice.

3, press 9 9 4, the device key will blink twice

4, press the Magic key once

5, enter the EFC code

EFC code 00018 for EZ-Adjust

EFC code 00019 for in-start

EFC code 00014 for power only

EFC code 00015 for in-stop

7, press the key to which the function will be assigned as the device key it will blink twice.

set the TV working and press the key that you have assigned this will now display a password request, enter 0413 via the regular LG Remote and the EZ-adjust menu will be displayed

8, set line three to DVX on

a minor correction there seems to be a limited number of keys you can use as the function key on the ucr-3920 (Magic Remote) only 2,4,5 and 7 work on my remote and 6 and 9 seem always to take you to a complete one problem seems to be that once a function key has been programmed you cannot alter it.